


NEXTECH SMART RING




USER MANUAL

PRODUCT DIAGRAM

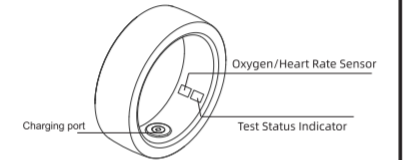


BOX CONTENTS

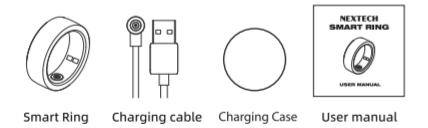

-1-

CHARGING


Connect the charging cable to power on the smart ring or align the ring in the charging case.

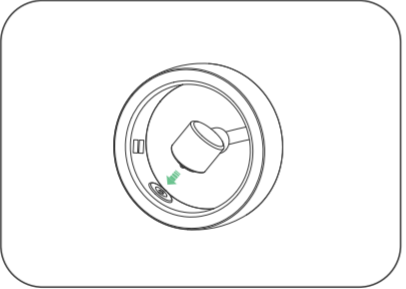

-2-

APP CONNECTION

1. Search and download Da Rings APP, or scan the QR code on the right to select the appropriate APP version to download.
2. Open the app and follow the instructions to pair the ring.

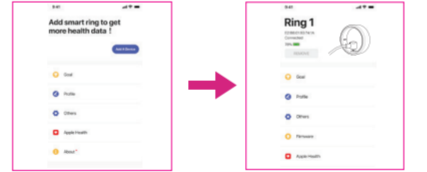


-3-

LIGHTING STATUS

The red light flashes when charging and turns off when fully charged


The green light flashes during the heart rate test and the red light flashes during the blood oxygen test

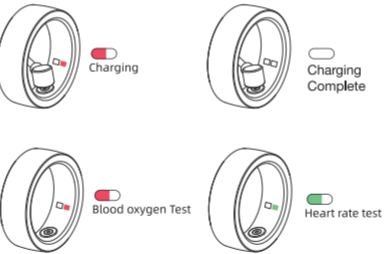

-4-

WEARING STYLE

Ensure a comfortable size is chosen for the finger you intend to wear it on. It is recommended for the most accurate results to wear it on the index, middle or ring finger.

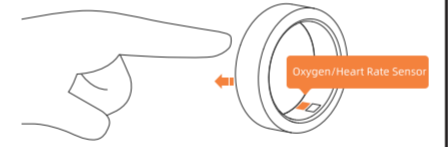

Please ensure that the Oxygen/Heart Rate sensor is on the inside of your finger for accurate results

-5-

SUPPORTED SPORT MODES

Walking, Running, Cycling, Skipping, Badminton, Basketball, Football, Climbing, Tennis, Rugby, Golf, Yoga, Dancing, Baseball, Elliptical, Indoor Cycling, Free Training, Rowing.

GPS Assisted Sport Modes - Requires Mobile device to be connected with GPS:

Walking, Running Cycling, Trail Running

SPECIFICATIONS

- Compatibility: Android 5.0, iOS 10.0
- Bluetooth: Version 5.2
- Battery: 18mAh (Ring), 220mAh (Case)
- Run Time: Up to 5 Days (Ring)
Up to 30 days (Ring + Case)
- Charge Time: up to 1.5 Hours
- Weight: 2.9g (Ring) 22.8g (Case)
- Dimensions: 2.6mm Thick
- Charging Cable: Ring charging cable (included)
USB-C Cable for case (not included)

-6-

NOTE

Before using and operating the device, please read and follow the following precautions to ensure optimal device performance and avoid dangerous situations.

In daily use, please choose a suitable size ring for your finger, avoid wearing it too tightly, keep the contact area of the ring dry, and wipe it down when it comes into water.

If there are any signs of redness or swelling, please remove the ring and consult with a doctor. Skin irritation can occur if the ring is not cleaned periodically with mild soapy water. - Do not subject to hot water.

Please keep the charging cable and device in a dry environment when charging. Do not touch the charging cable with wet hands and avoid it being immersed in liquids.

Do not disassemble or modify the battery, insert foreign objects, or immerse it in water or other liquids. Do not drop, squeeze, or puncture the battery. Avoid the battery being subjected to large external pressure, this can cause internal short circuits and overheating issues.



-7-

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months. If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure. To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you. The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by: Electus Distribution
Address 46 Eastern Creek Drive, Eastern Creek NSW 2766
Ph. 1300 738 555